


Rod Suspension - Installation Instruction

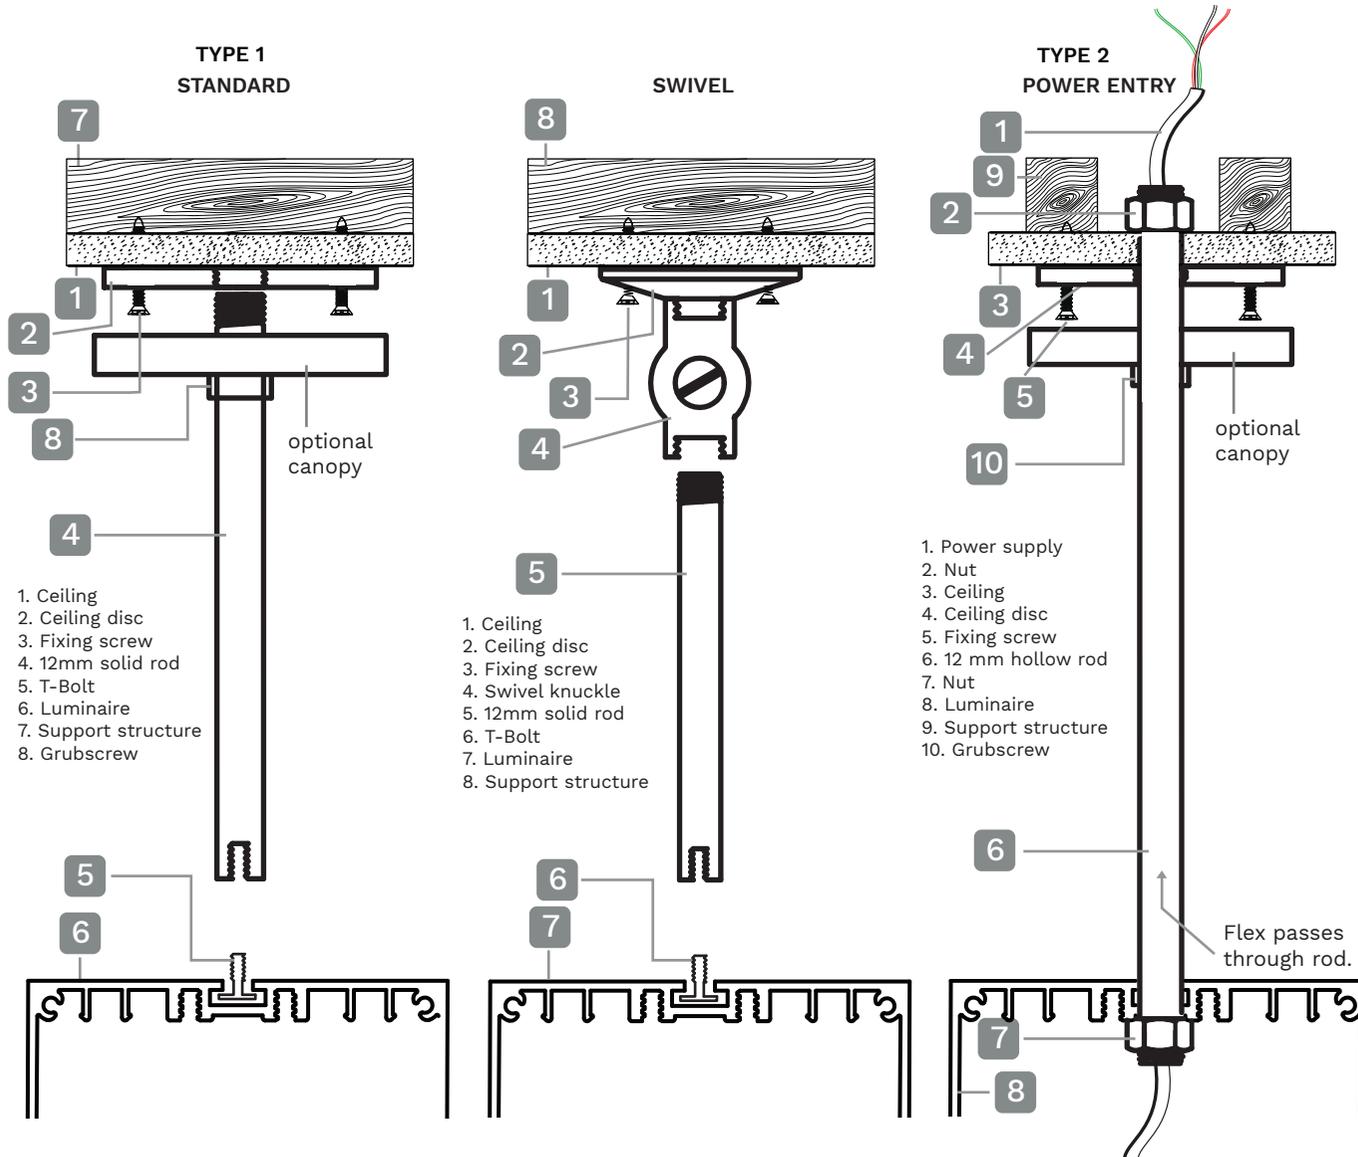

- 1 Check diagram to ensure that all relevant parts are packaged with your delivery.
- 2 Use one of the ceiling disks as a template to pre drill fixing holes into the ceiling at centres that suit the suspension plan provided before assembling rods.
- 3 Loosen one endplate of luminaire to allow T-bolts to slide into suspension groove. Slide "T" part of the bolt past endplate. When required amount of T-bolts have been placed into groove, refasten endplate onto luminaire. (TYPE 1 ONLY)
- 4 Type 1 rods will need to be placed into the correct hanging position and rotated so they tighten down onto the extrusion.
- 5 The TYPE 2 rod should be fixed directly onto the ceiling first with flex tail hanging out of the bottom of the rod. Remove the nut on the bottom of the rod and insert the rod through hole in luminaire and place nut. Where flex has been factory fitted a nut will be supplied on the flex inside the fitting. The flex should be fed up the rod before inserting rod through the fitting and securing the nut.
- 6 Fasten ceiling discs to ceiling with suitable fixings and slide canopies (if fitted) into position. Lock canopies in place with grub screw provided.
- 7 Note: Please be aware that these suspension rods are only to support the weight of the luminaire attached. Once the system is in position, it should still be treated as any other lighting fixture. Do not move the system sideways as this may cause damage to the suspension rods.
- 8 Note: Where a luminaire has a flex and no plug, we recommend using a clipsal 240/20 series or similar junction box at the point of termination.